


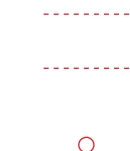

Clear and Simple Quick Start Guide

ZTE Grand™ X 4



ZTE

More information

On the web

Detailed support information, including device specifications and a full user's manual, is available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at **1-855-246-2461** or
- Dial **611** from your cell phone.

Accessories

For more information concerning accessories, please visit your local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines—FCC ID SRQ-Z956. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2016 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDXC™ logo is a trademark of SD-3C, LLC. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

© 2016 ZTE CORPORATION. All rights reserved. No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation. The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.



Getting to know your ZTE Grand™ X 4



Email



Email setup (Gmail™, Yahoo!®, etc.)

1. From the home screen, tap **Apps** (⋮) > **Email** (✉️).
2. Select an account type, enter your email address and password, and then tap **Next**.
3. Confirm email account settings and tap **Next**.
4. Name the account, enter your name as it will appear on outgoing messages, and tap **Next**. Your email will begin to synchronize with your phone.

Note: To set up corporate email, contact your IT administrator.


Create and send an email message

1. From the home screen, tap **Apps** (⋮) > **Email** (✉️).
2. To compose a new message, tap **Compose** (✉️).
3. Tap the **To** field and enter email address or name, or tap **Contacts** (👤) to access your contacts.
4. Enter a subject and email message.
5. To attach files to the email message, tap **Menu** (☰), then tap **Attach file** and make your selection.
6. Tap **Send** to send the message.

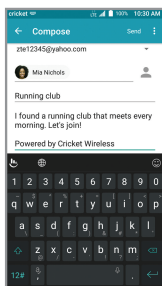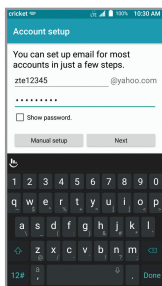


Phone setup

1. Insert the tray eject tool (or end of a paper clip) into the hole on the nano-SIM card tray and pull the tray out.

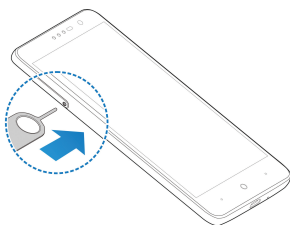


2. Place the nano-SIM and microSDXC cards in the tray with the gold-colored contacts facing down.

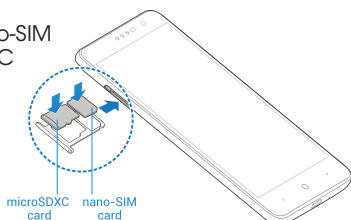

3. Carefully slide the tray back into place.

4. Charge your phone.

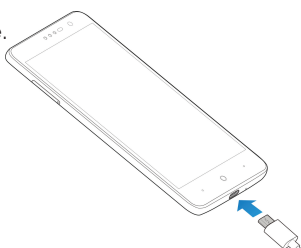

Cricket services

These services make using Cricket even better and easier.



My Cricket: Access billing, make a quick payment, view usage and access support from the palm of your hand.



Cricket Wi-Fi Manager: Helps you save your high-speed data by seeking out free and open Wi-Fi® hotspots whenever you're near them. Also remembers your favorite Wi-Fi hotspots and connects you automatically. Cricket does the searching so you can do the saving.



Visual Voicemail: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.





Deezer from Cricket: Listen on-the-go with ad-free streaming music, download your favorites to your phone, and get customized playlists based on your preferences.

Touch screen

Navigating your phone

- Press the **Power key** and then press and hold the screen to unlock.
- Use your fingertip to lightly touch the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- Spread two fingers apart or pinch them together on the screen to zoom in or out on a web page or a Gallery image.
- To return to the previous screen, tap the **Back key**.
- Tap the **Home key**  at any time to return to the main home screen. Press and hold the **Home key**  to access Google Now™.
- Tap the **Recent apps key** to access recently viewed apps.
- Tap **Apps**  to access applications on your phone.
- To exchange the positions of the Back key and Recent apps key, tap **Home key**  > **Apps**  > **Settings**  > **Navigation key** and select an option.

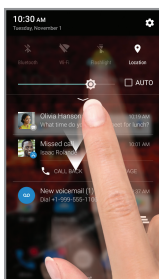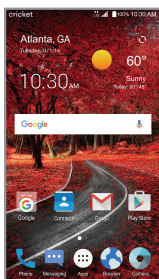

Notifications panel

- Tap the top of the screen and drag your finger down to see the Notifications panel. Pull down one more time to reveal additional options.
- Tap  to turn Battery Saver on.
- Tap  to access the Settings menu.
- Tap  to change position of icons on the Notifications panel.
- Swipe right or left to clear most individual notifications or tap  to clear all. For certain apps, swipe left to choose to stop notifications for that app.

Cool tools



Selfie: Take selfies quickly and easily. Access the front-facing camera from the lock screen or from the Apps menu to capture the moment instantly without switching between camera modes.



AskMD: Get personalized health consultation that helps identify what's bothering you and organizes your health information, enabling you to have a more effective doctor's visit.



Dolby Audio: Via headset or stereo speakers, Dolby Audio™ provides premium sound and customizable audio settings for music, movies, and gaming.

Personalize

Set wallpaper

- To change your wallpaper, press and hold a blank part of the home screen and tap **Wallpapers**.
- Tap a wallpaper to set it. You can also tap **GALLERY**  or **LIVE WALLPAPER** for more options.

Add to home screen



- Tap **Apps** , press and hold an app, and drag it to the home screen.
- Press and hold a blank part of the screen and tap **Widgets**. Press and hold a widget and drag it to the home screen.

Organize home screens

- To move an icon, press and hold it and drag it to a new location. To delete it, drag it to **Remove** .
- Press and hold an icon and drag it to **Folder** . Drag more icons to add them to an existing folder.

Use fingerprint sensor

- Tap **Apps**  > **Settings**  > **Security** > **Fingerprint** and follow the on-screen prompts to register your fingerprint.
- Simply rest your finger on the sensor to wake/unlock your phone.
- Register up to five different fingerprints to open chosen apps when the screen is locked or off.

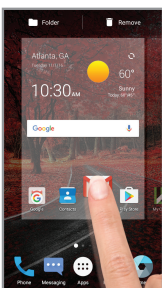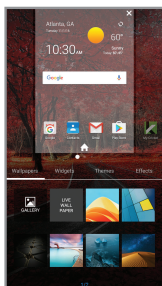


Health and fitness tracking

Argus is a healthy lifestyle services app that makes staying fit easy, painless, and fun! Argus provides activity and diet tracking along with a social network focused on health and fitness.

Set up Argus

1. From the home screen, tap **Apps**  > **Argus** .
2. Tap **Enter Your Email**, or sign up via Facebook® or Google+™.
3. To set up your profile, tap **Menu**  > **Settings** and enter your height, weight, heart rate, stride length, and other specifics.
4. Tap the blocks on the app's main screen to set up your calorie goals, add a buddy, read motivational tips and tricks, and more.

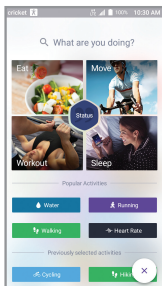

Use Argus

1. From the home screen, tap **Apps**  > **Argus** .
2. Tap **Add**  and choose an activity (Eat, Move, Workout, Sleep).
3. Follow the on-screen instructions.

Notes:

- Activities you can track can be customized (e.g., Move/Workout). Select an activity, and then tap **START** >  > **CUSTOMIZE**.
- To pause and resume recording of an activity, tap **Pause**  / **Resume** . Tap **Stop**  > **Save**  to save the activity.

Calls and voicemail

Make a call

1. From the home screen, tap **Phone** .
2. Type the name or phone number of a contact in the search box at the top of the screen. Or, tap  and enter a phone number. Tap the matching contact or tap  to place the call.

Check voicemail




1. From the home screen, tap **Phone** , then tap .
2. Press and hold the **1 key** .

Use call waiting

Call waiting helps you answer or hold a call while you are on an existing call.

1. While on a call, you will hear a tone if another call comes in. Tap **Hold current and answer**.
2. Tap  to merge calls or tap  to switch between active calls.

Note: To access Call Settings, tap **Menu**  from the dialer screen.

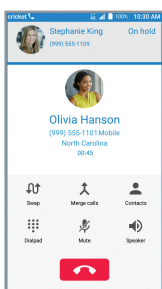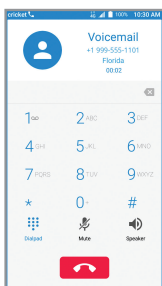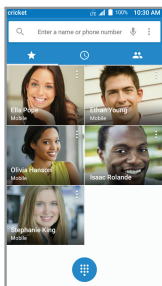

Apps on Google Play™

The Grand X 4 is preloaded with great apps to take your experience to the next level. To find additional apps to make your phone experience even better, check out Google Play.



Access Google Play

1. From the home screen, tap **Play Store** .
2. Enter your existing Google account or create one following the steps on the screen.

Navigate Google Play

From Play Store, you will have multiple ways to search for apps, games, and more.

1. Tap a category to browse popular apps, games, movies, and music organized by popularity or category.
2. Tap **Search**  to search the Play Store for a specific game or app. You can also enter a term in the search bar, or speak one by tapping **Voice Search** .
3. To install, tap the app and follow instructions. Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in **Apps** .

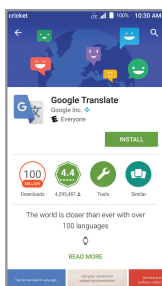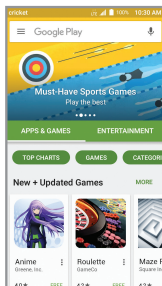


Note: A payment method, such as Google Wallet™, is required to purchase apps.

Text and picture messaging


Send a text message

1. From the home screen, tap **Messaging** .
2. Tap **New message**  to start a new text message.
3. In the **To** field, enter a number or a contact name or tap **Contacts**  to access your contacts.
4. Tap the **Type message** field and enter your message.
5. Tap **Send**  to send the message.

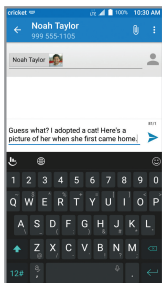

Send a picture message

1. Follow steps 1-4 above.
2. Tap the **Paperclip** .
3. Tap **Picture**  and select desired picture.
4. Tap **Send**  to send the message.

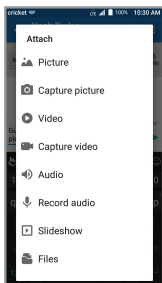

Please don't text and drive.

Camera and video

With the Grand X 4, choose from three different modes (manual, auto, and modes) to satisfy every type of photographer!

Take a picture

1. From the home screen, tap **Camera** .
2. Zoom in and out by pinching with your fingers.
3. Tap  > **CAMERA** to adjust your camera settings.
4. Tap the **Shutter button**  to take a photo or press the **Volume key**.



Take a video

1. In camera mode, tap **Start recording**  to start, tap **Pause recording**  to pause, tap **Resume recording**  to resume, and tap **Stop recording**  to stop recording video.
2. Tap  > **VIDEO** to adjust your camcorder settings.



Share a picture or video

1. From the home screen, tap **Apps**  > **Gallery** .
2. Tap an album and then tap a photo or video.
3. Tap  and select an option for sharing.

Note: See user manual for additional photo features and settings.

